



NOTES

- UPSET ENDS TO FORM TENON
 - ISOLATE WROD USING BUTCHER OR GUILLOTINE.
 - DRAW DOWN TENON USING A HAND HAMMER, SET HAMMER OR SMOOSH-A-MATE.
 - DRESS TENON AND SHOULDER USING A MONKEY TOOL.
 - TRIM TO $\frac{3}{8}$.
- PUNCH AND DRIFT HOLDS AS NEEDED.

LEVEL 1 FARM GATE HOOK

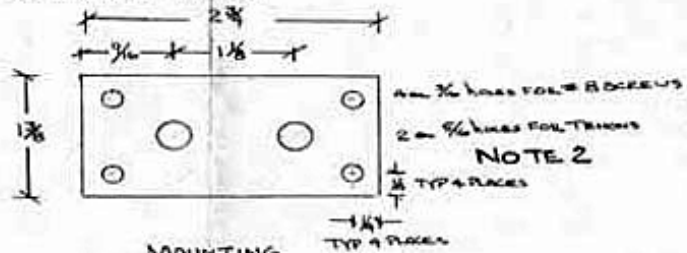

MOUNTING
PLATE
MATERIAL No. A36



DETAIL 1
FAGOT WELD
NICK MATERIAL, FOLD BACK
AND FORGE WELD TO ADD
MATERIAL TO FORM THE BARB